

FIG. 1

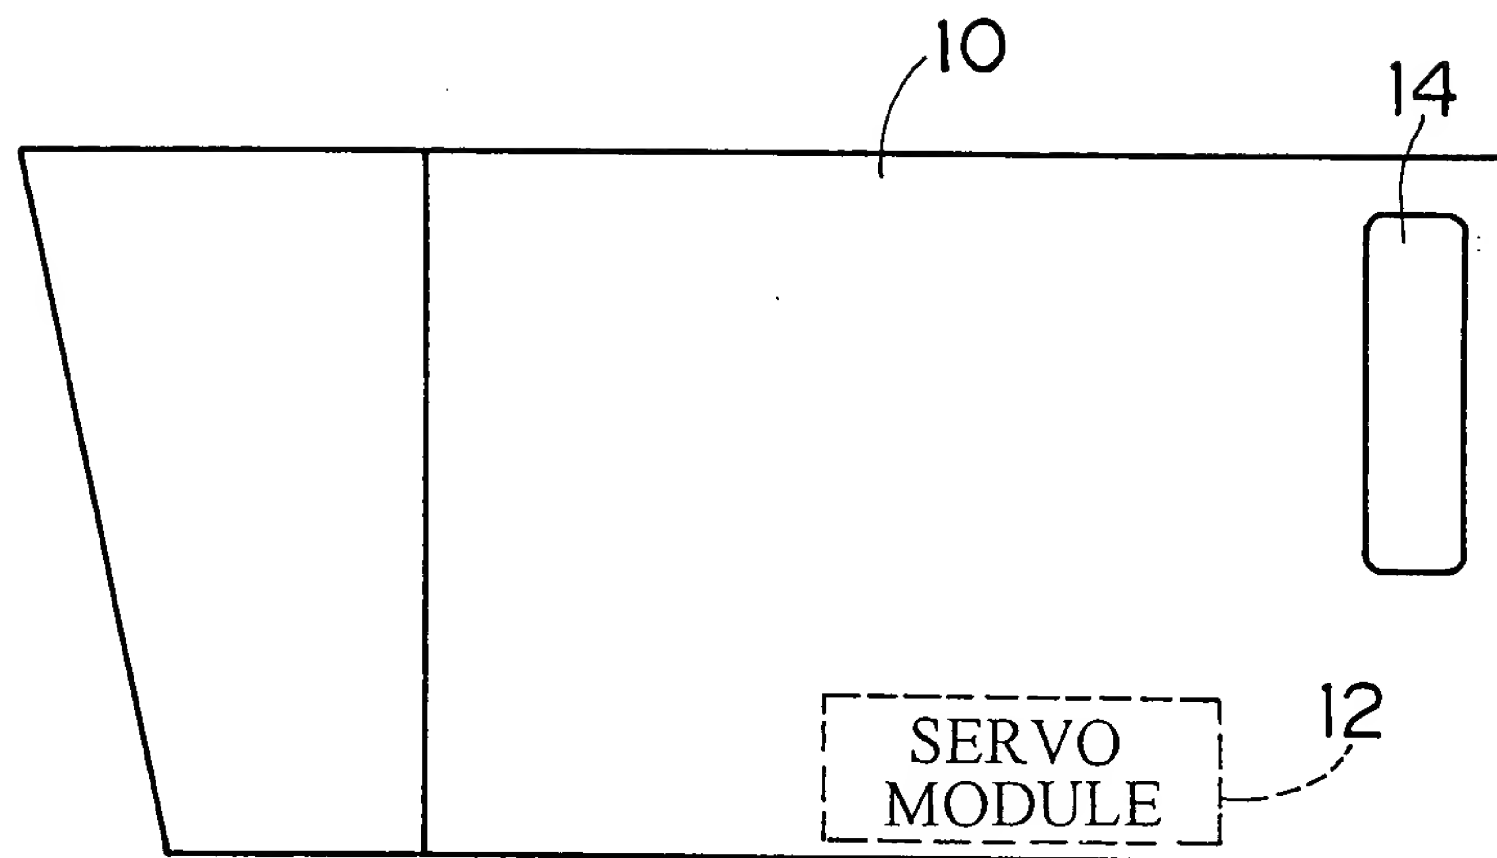


FIG. 2

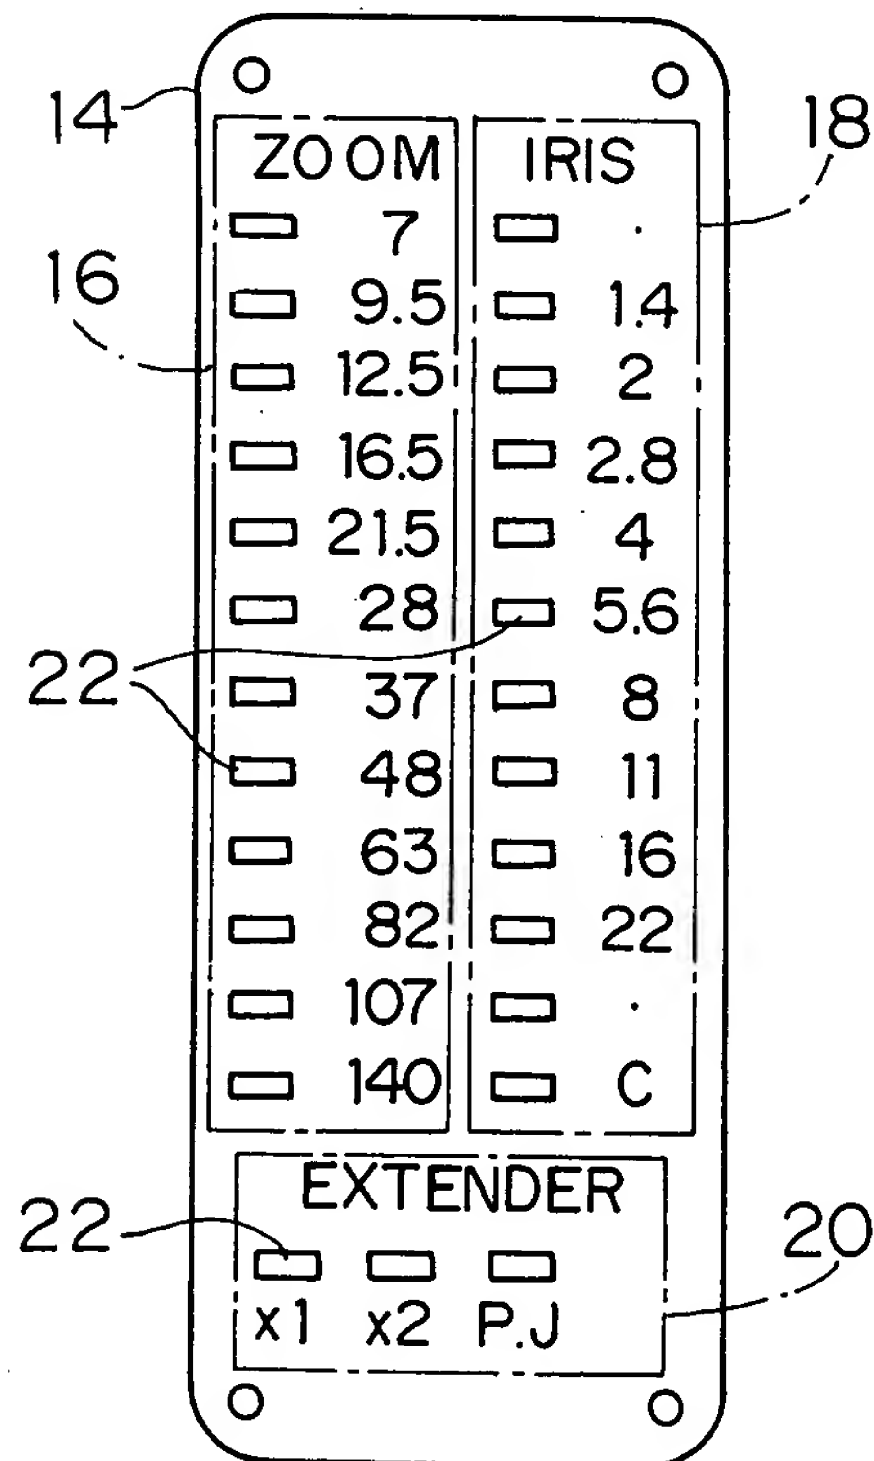


FIG. 3

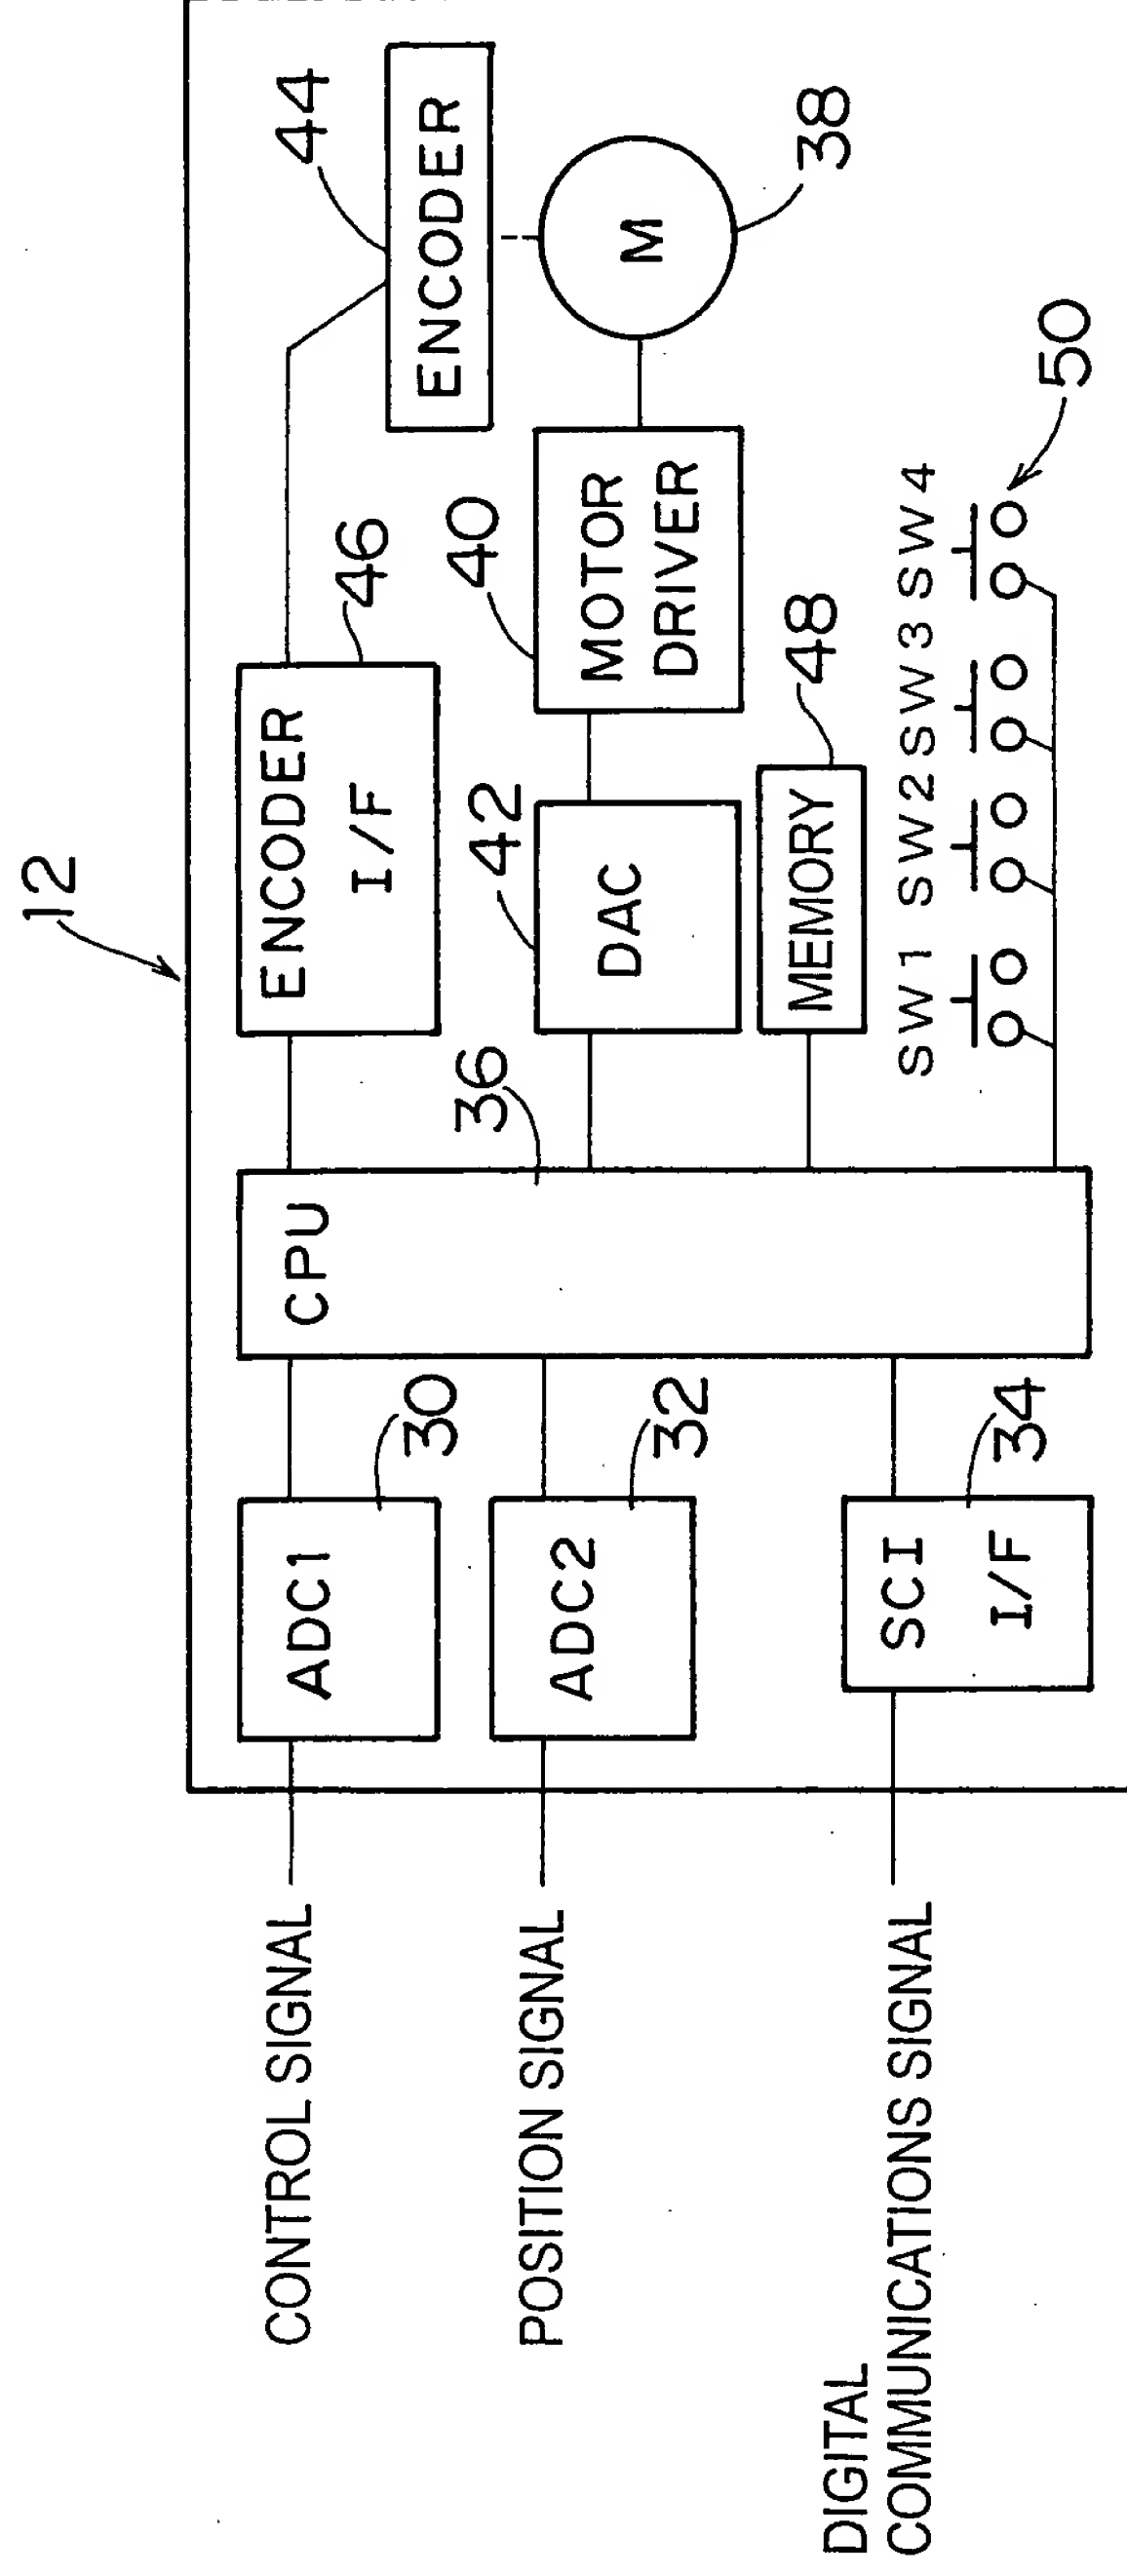


FIG. 4

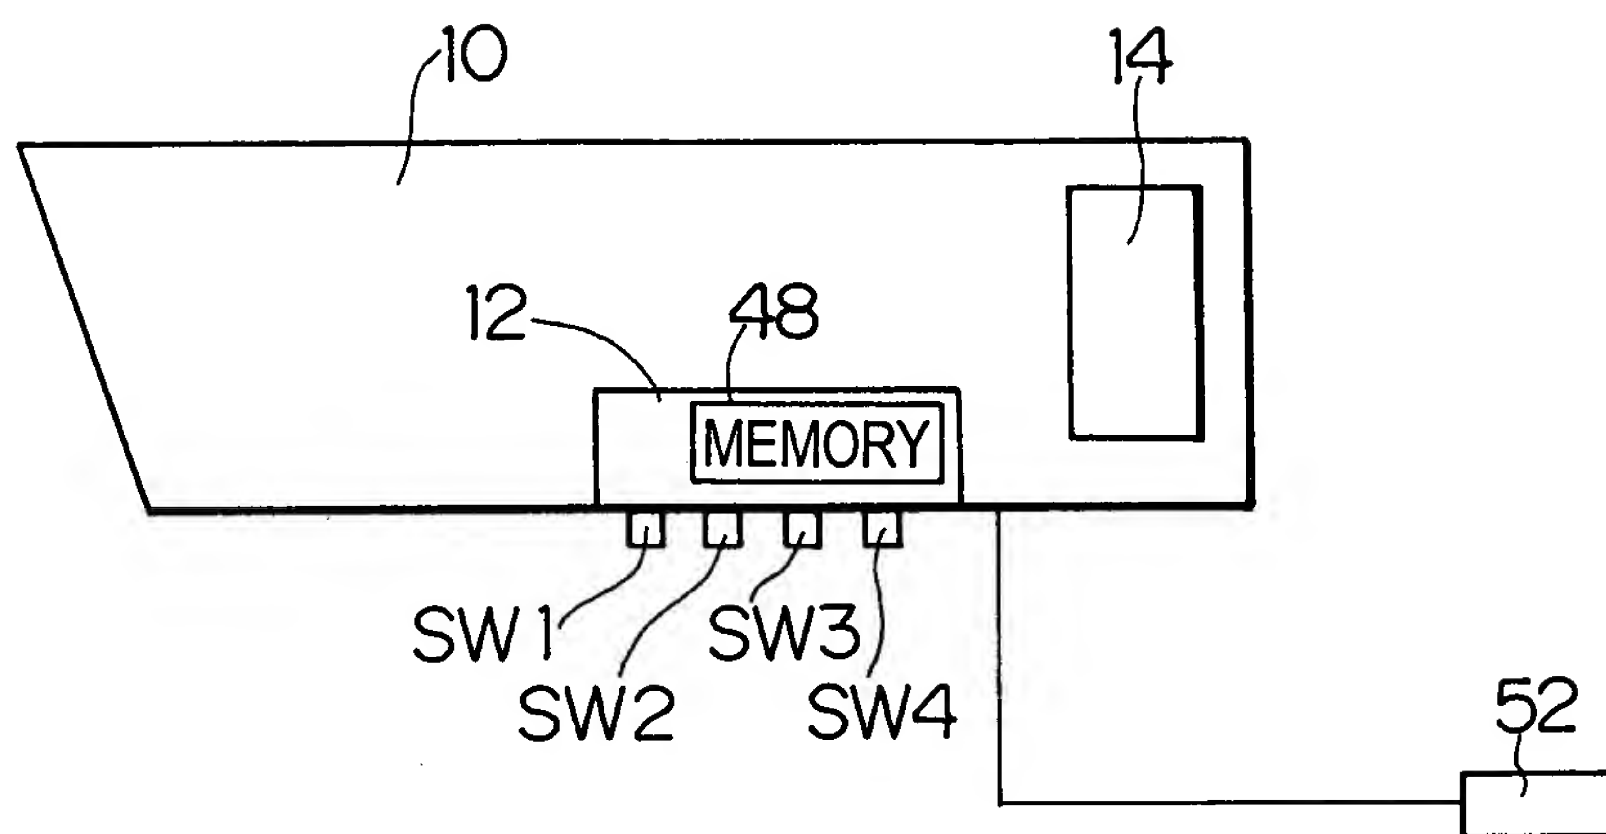


FIG. 5

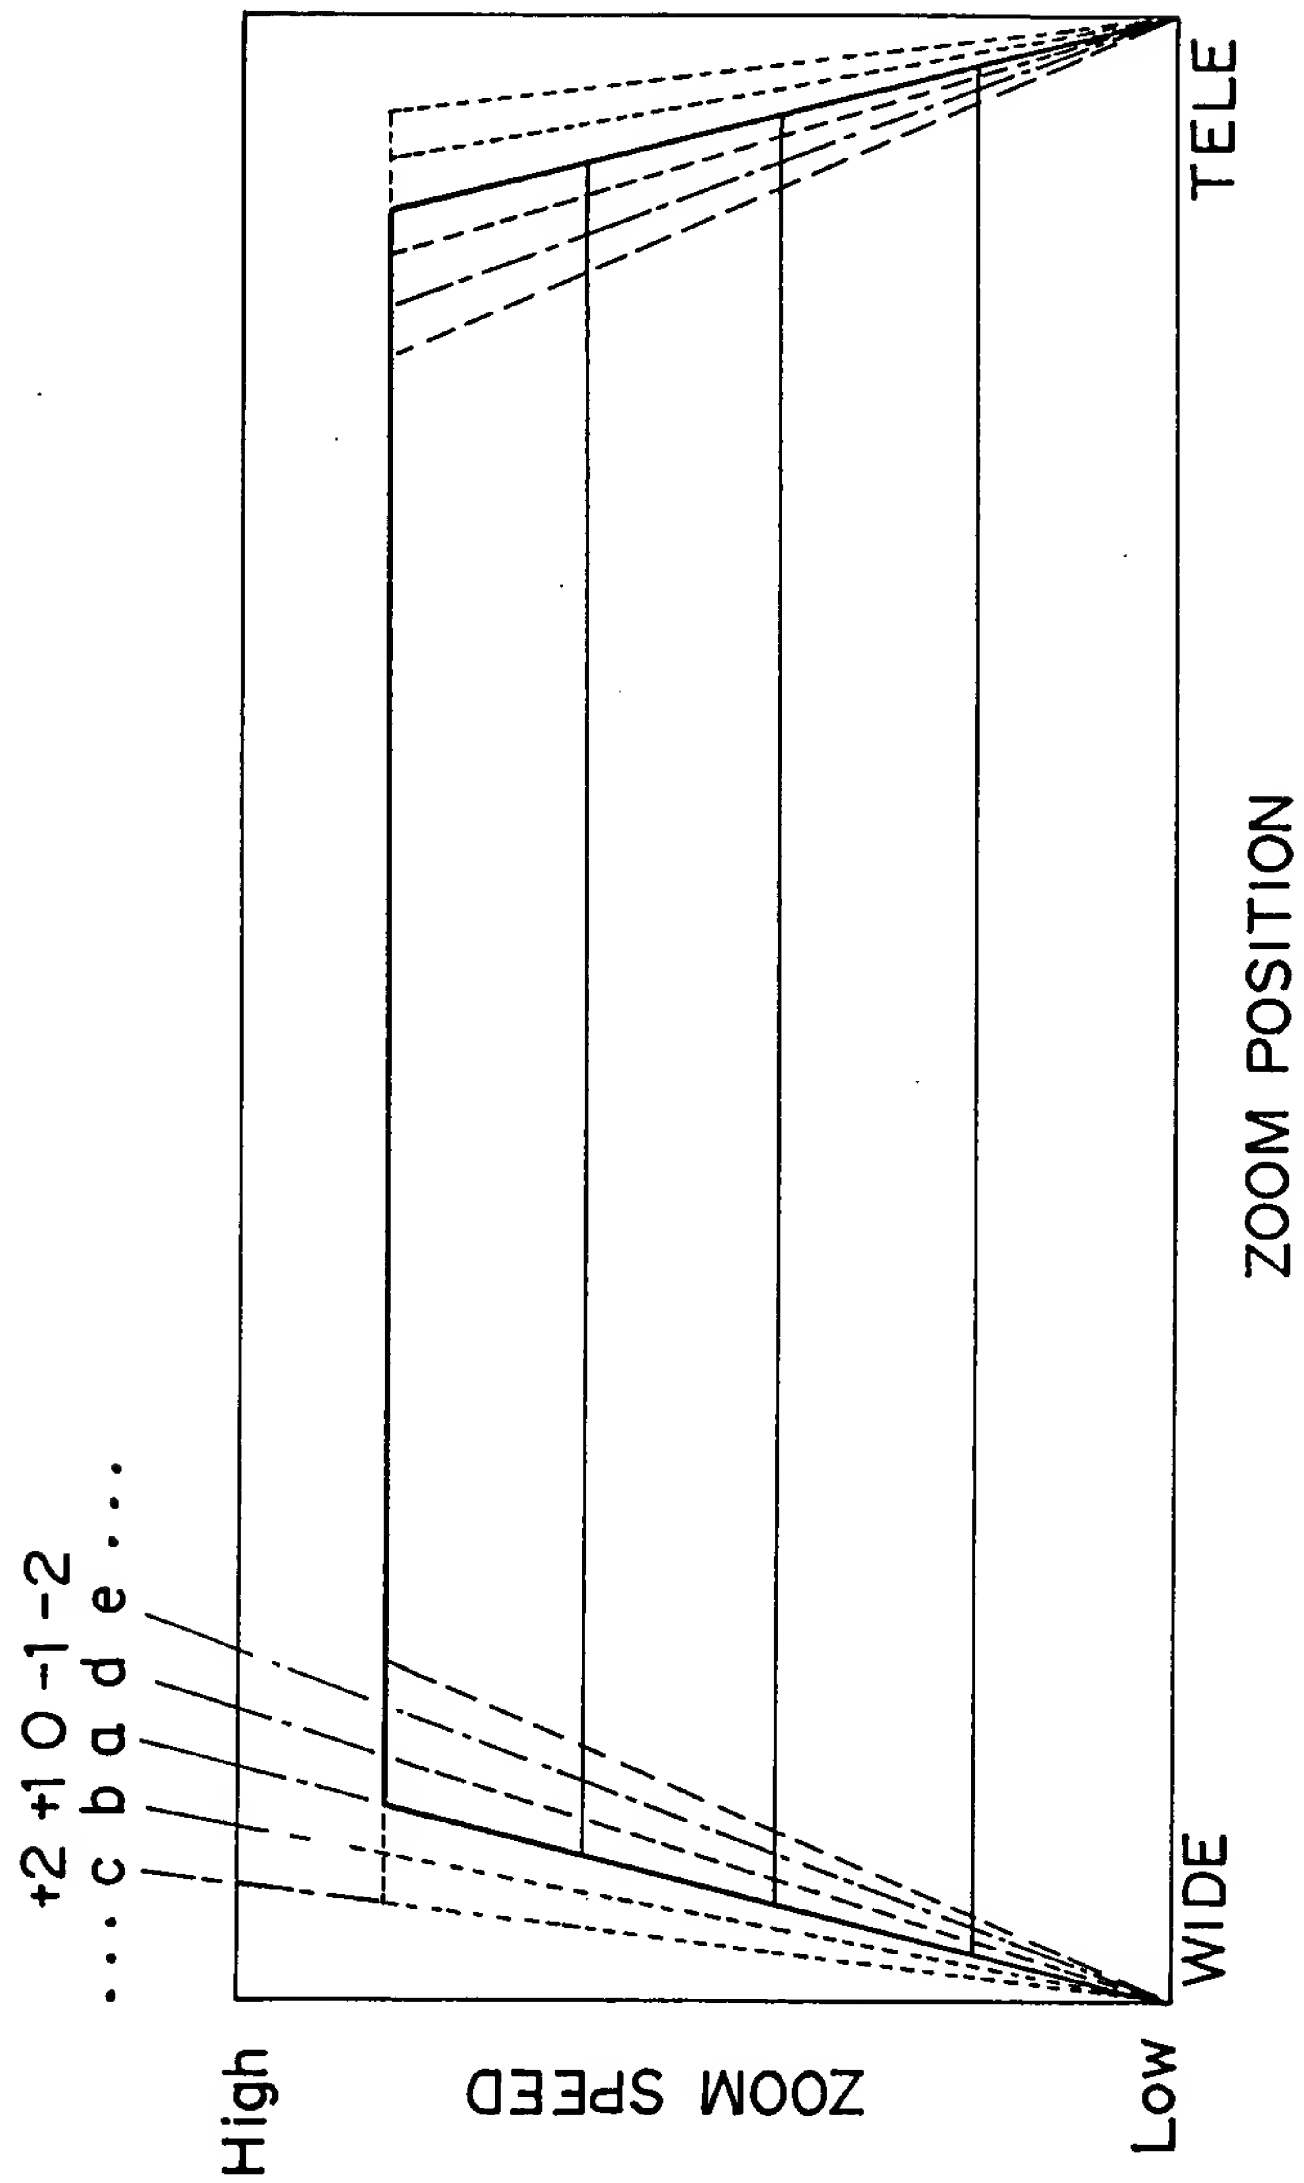


FIG. 6

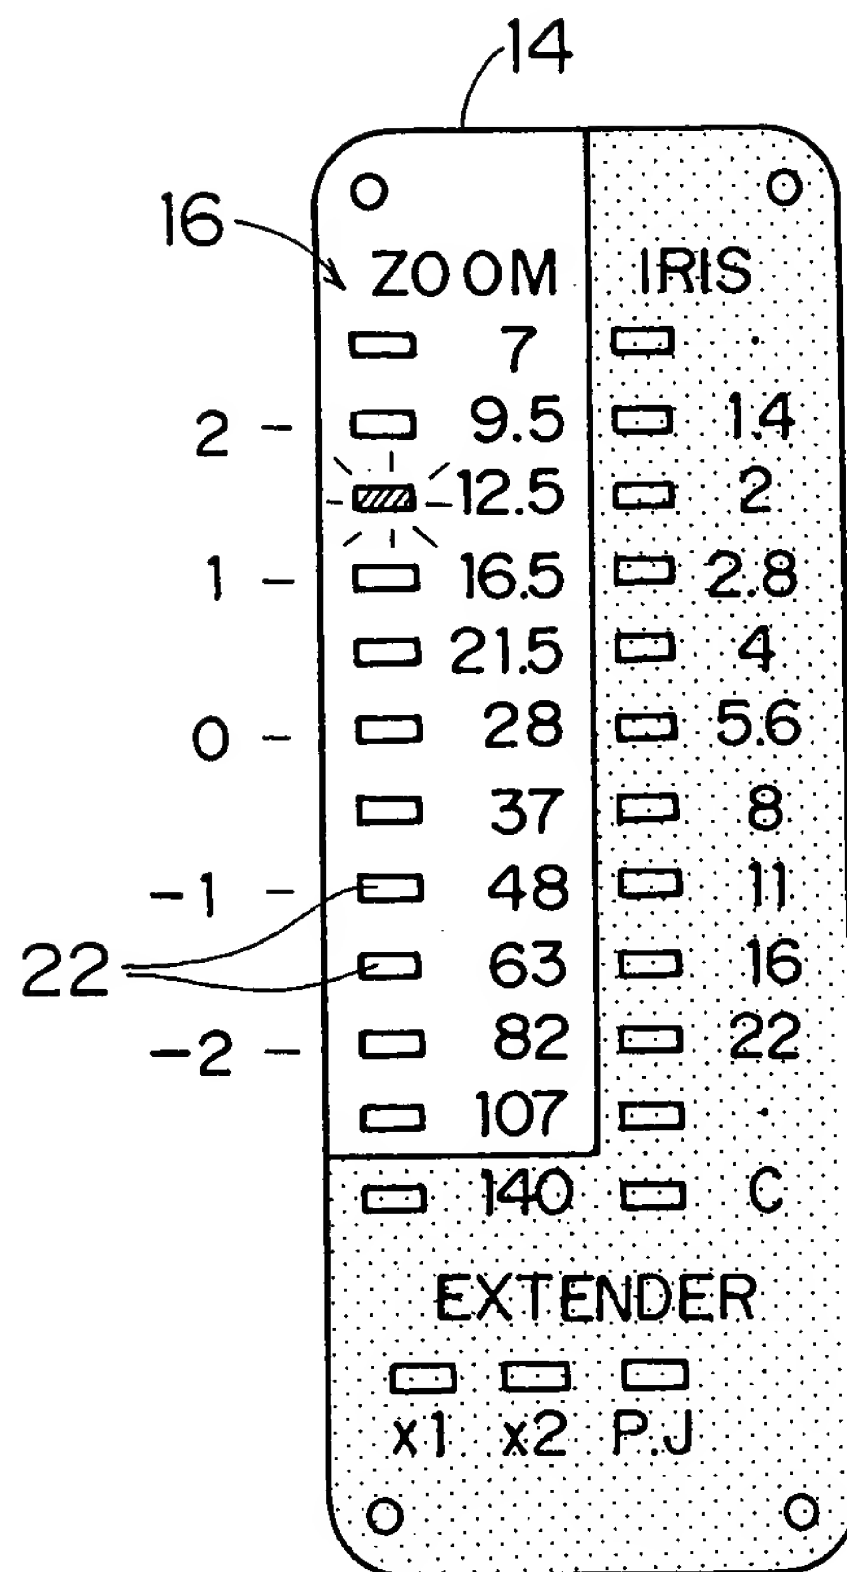


FIG. 7

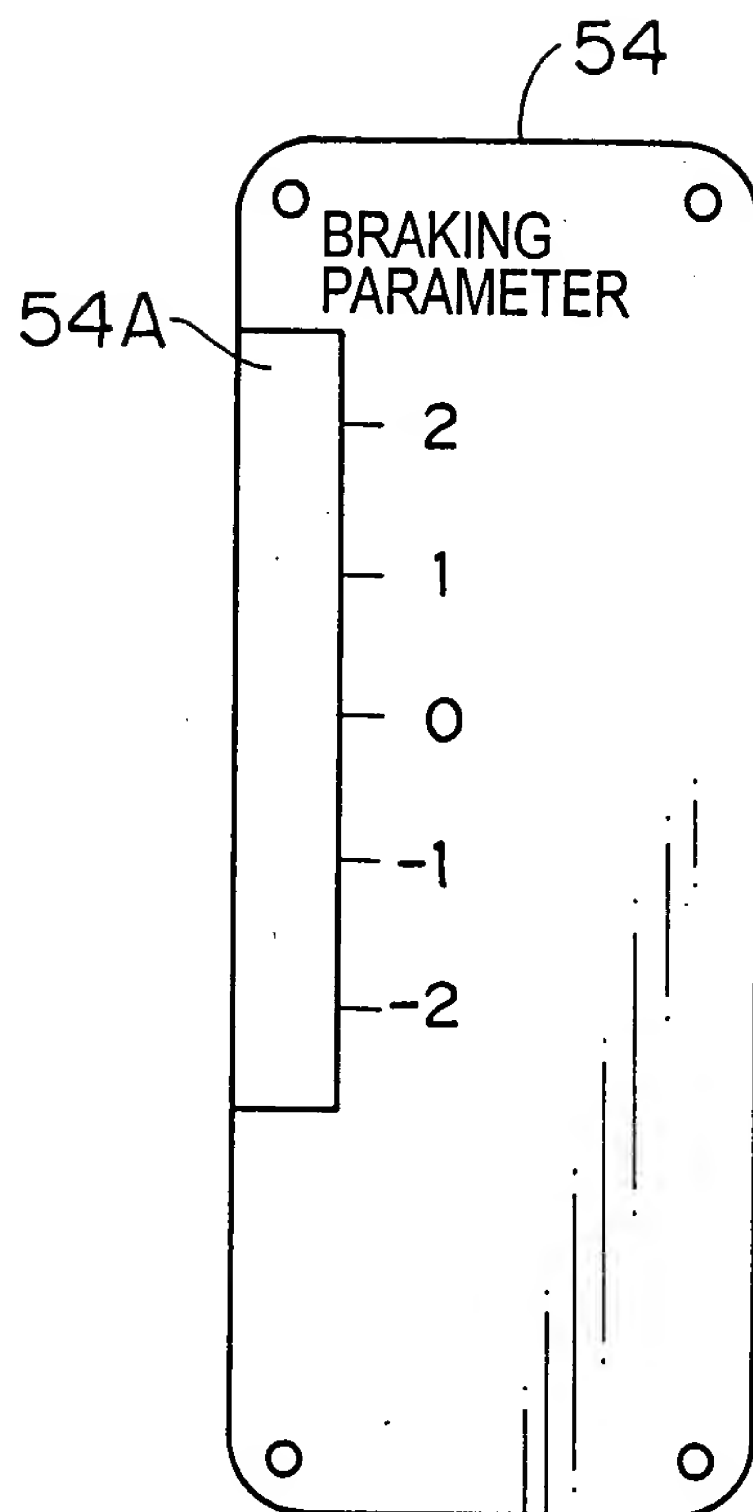


FIG. 8

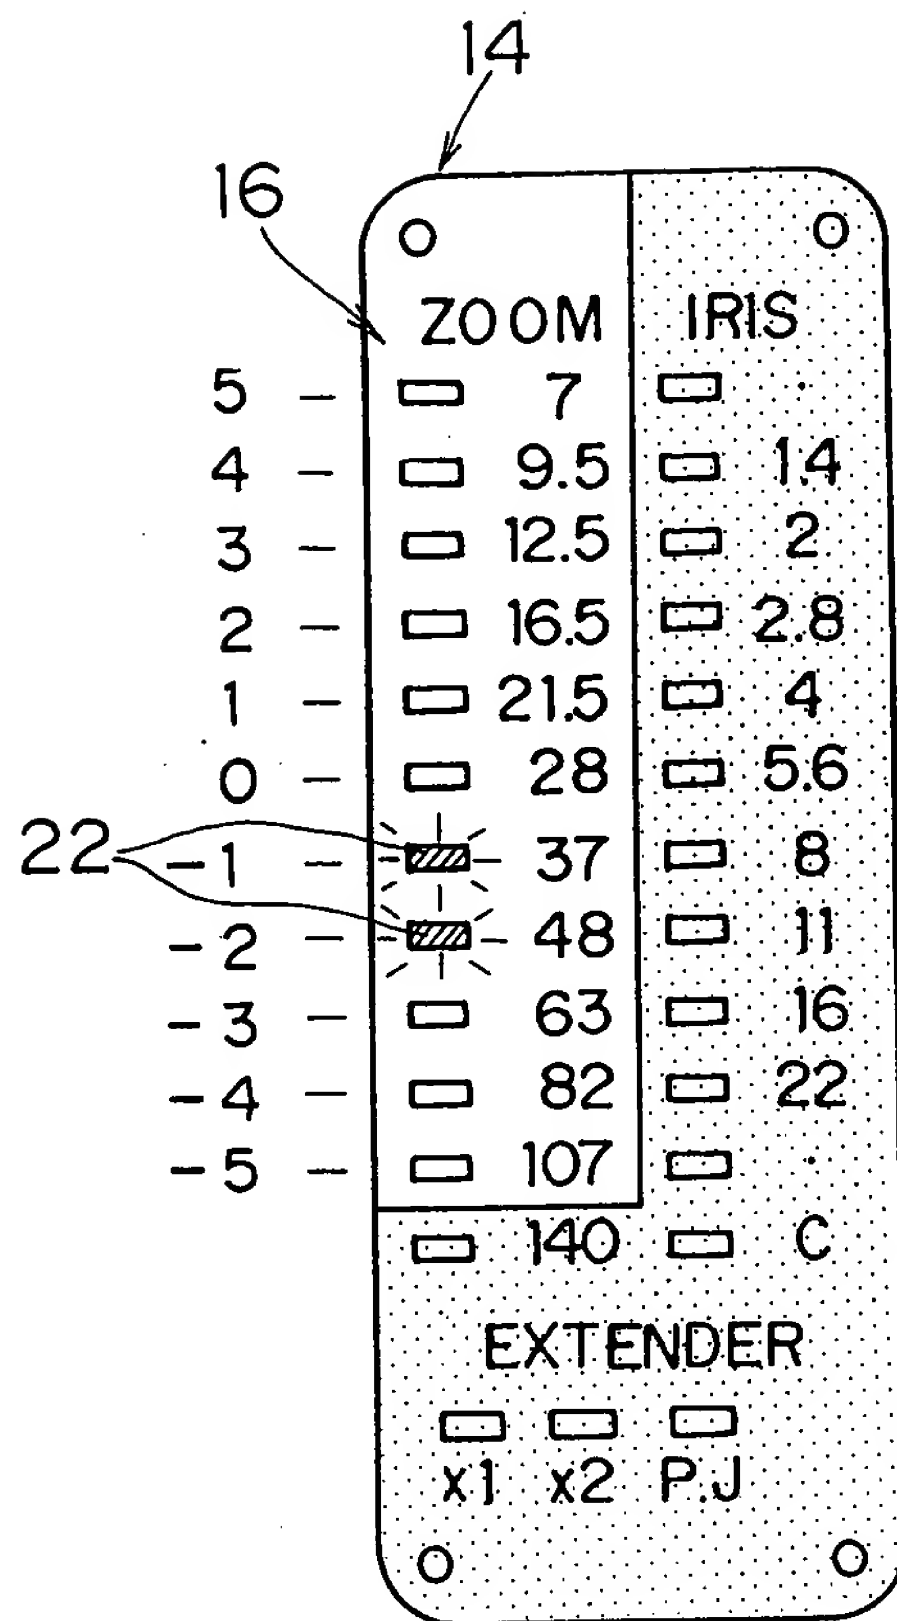
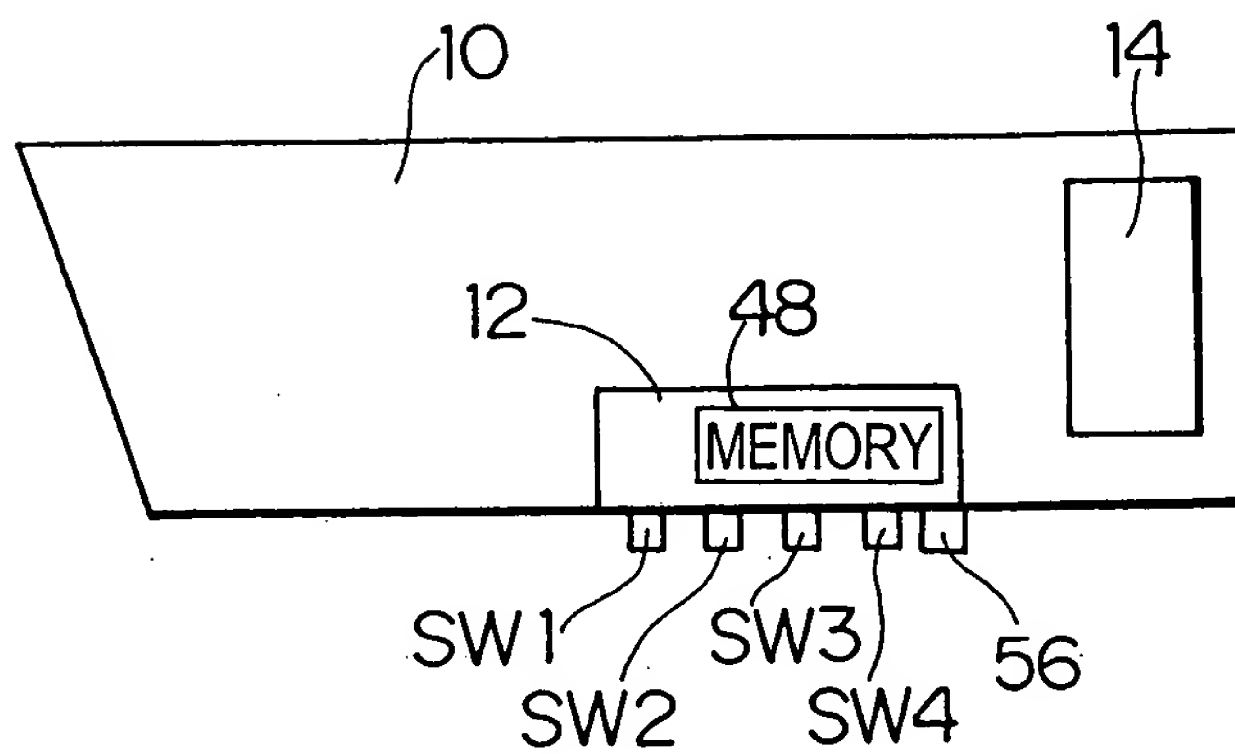


FIG. 9



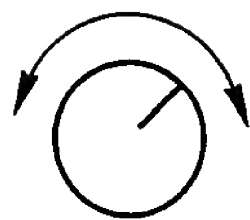


FIG. 10(A)

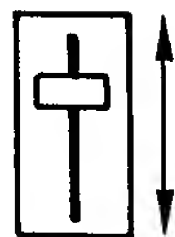


FIG. 10(B)

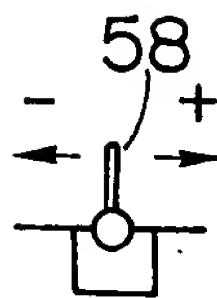


FIG. 10(C)

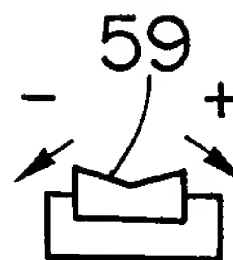


FIG. 10(D)

FIG. 11

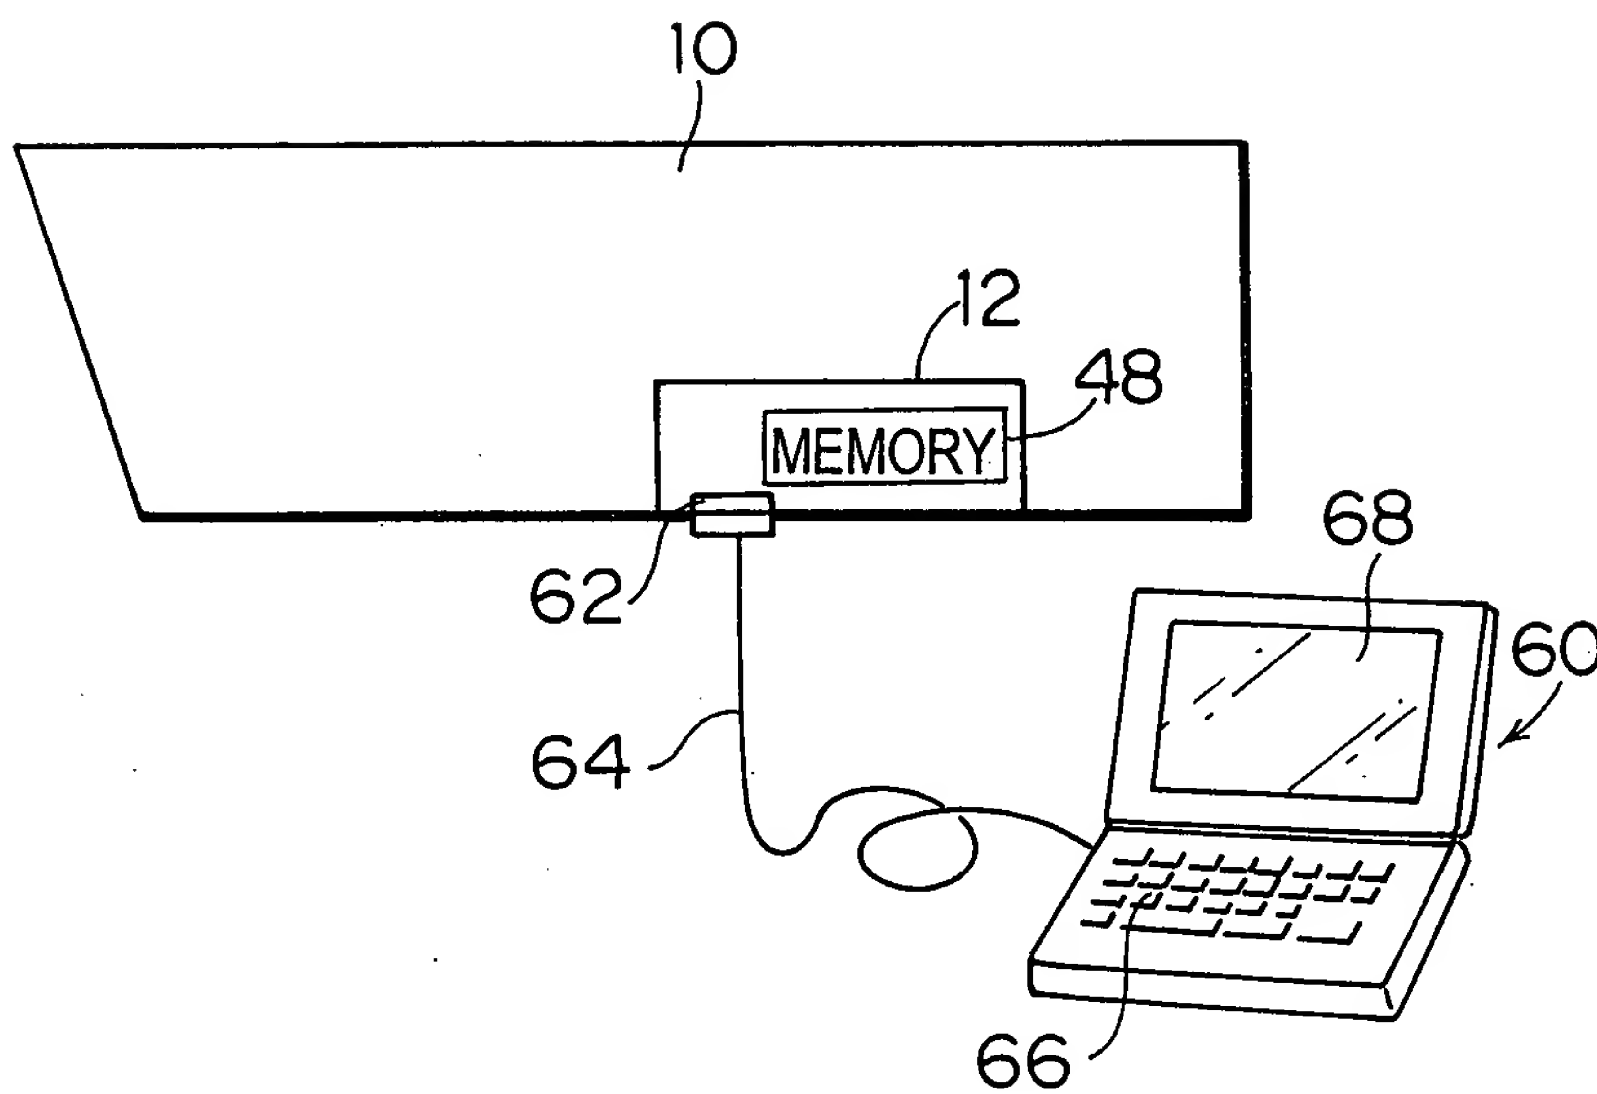


FIG. 12

SETTING BRAKING CONTROL PARAMETER

☐ ☐ ☒

FILE

EDIT

COMMUNICATION

INITIALIZE

82 CONNECTION
INITIAL VALUE OF SERVO MODULE

84 DISCONNECTION
INITIAL VALUE SET IN LENS

86
88

Low

High

ZOOM SPEED

WIDE

TELE

ZOOM POSITION

SET VALUE -1.5

OK

CANCEL

F I G. 1 3

